

For additional languages, visit LandingZone.net/languages





For additional languages, please visit LandingZone.net/languages

DOCK. LOCK. CONNECT.

COPYRIGHT & TRADEMARK INFORMATION

© 2012 InfiniWing, Inc.

LandingZone is a registered trademark of InfiniWing, Inc.

Apple, the Apple logo, MacBook Air, Mac OS X, Snow Leopard, Lion, and Mountain Lion are trademarks of Apple, Inc., registered in the U.S. and other countries.

 
iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple, Inc.

Kensington is a registered trademark by Kensington Computer Group, a division of ACCO Brands.

All other company and product names mentioned may be trademarks of their respective companies. Mention of third-party products is for informational purposes only and does not constitute an endorsement or recommendation. InfiniWing assumes no responsibility with regard to the performance of products mentioned.

PROPER OPERATING ENVIRONMENT

- Line voltage: 100-240V AC
- Frequency: 50Hz to 60Hz
- Operating temperature: 50° to 95° F (10° to 35° C)
- Storage temperature: -13° to 113° F (-24° to 45° C)
- Relative humidity: 0% to 90% noncondensing
- Maximum operating altitude: 10,000 feet
- Maximum storage altitude: 15,000 feet
- Maximum shipping altitude: 35,000 feet



CARE & CLEANING

Clean with a soft cloth. Do not use water or cleaning solutions to clean LandingZone.

When travelling, use the supplied Travel Clip to keep the lever closed

DISPOSAL

Applicable laws may limit how you can dispose of this product. Accordingly, please make sure you follow your local, state, federal, and country ordinances, laws, regulations, or other guidelines to properly dispose of this product and the accompanying packaging materials.

Dear MacBook Air Owner,

Thank you for your purchase of the LandingZone. We hope it provides you with great satisfaction. The LandingZone is quite easy to use but, should you need some help with it, this manual is designed to easily walk you through how to use it.

If you have any questions or need support, please feel free to contact us anytime at landingzone.net or by calling 888-872-3251

Sincerely, Kitae Kwon CEO, infiniWing, Inc.

8

MODEL NUMBERS

LZ1011A for MacBook Air 11-inch LZ1013A for MacBook Air 13 inch

COMPATIBILITY

This device works with:

13-inch MacBook Air models released on late-2010 (Model A1369) and Mid-2011 (Model A1369)

11-inch Macbook models released on late-2010 (Model A1370) and Mid-2011 (Model A1370)

WHAT'S IN THE BOX?

- LandingZone Secure Docking Station
- Power Adapter
- Lever Lock Travel Clip
- Manual
- Warranty Card
- Registration Reminder Card

ONLINE SUPPORT

Go to landingzone.net/support

PHONE SUPPORT

Call 888-872-3251 (Monday - Friday, 9:00 a.m - 5:00 pm Pacific Time)

EMAIL SUPPORT

Send email to support@infwing.com

ETHERNET DRIVER DOWNLOAD

Download at landingzone.net/download

CUSTOMER SUPPORT

BENEFITS

LandingZone is an attractive and simple to use secure docking station for the MacBook Air. You can return from traveling with your computer and simply snap it into the LandingZone on your desk and enjoy the benefits of a complete desktop workstation.

FEATURES

- Single-step docking
- Built-in USB Hub with 4 USB 2.0 ports
- 10/100BASE-T Ethernet port
- Mini DisplayPort capable of driving resolution up to 2560x1600
- Built-in security port compatible with all the Kensington® Laptop Locks (sold separately) to secure your MacBook Air

- U.S. Power adapter with wide range of input voltage (100~240 VAC)
- Supports high-speed charging of iPhone, iPad, and iPod on the left side
- USB pass-through port
- White on/off status LED on the right wing
- Lever Lock Travel Clip for travel

BEFORE YOU BEGIN

Travel Clip: Remove the Travel Clip (1) on the Opening Lever (8). When transporting your LandingZone Pro, you can use the Travel Clip to secure the Opening lever.

Ethernet functionality: Go to **landingzone.net/download** to download and install the latest Ethernet driver for full Ethernet compatibility.



USB DEVICES ARE NOT WORKING

Make sure that both sides of the LandingZone are completely closed and the connectors are fully inserted into the MacBook Air. Confirm that the power adapter is properly plugged into your wall outlet and connected to the LandingZone (the On/Off Status Indicator light should glow).

MACBOOK AIR IS NOT CHARGING

Confirm that you properly inserted the MacBook Air's MagSafe power adapter into the LandingZone (4).

ETHERNET IS NOT WORKING

Double-check that you have the proper Ethernet driver installed.

WINGS DON'T CLOSE PROPERLY


Make sure that you push the MacBook Air all the way back to the two guide posts. Before carefully pushing the sides together, align the connectors so that they fit into the MacBook Air's ports.

IPHONE/IPAD/IPOD CHARGES SLOWLY

Use the USB port on the left side for high-speed charging.

6

TROUBLESHOOTING

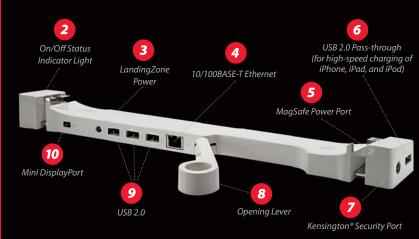

DOCKING

STEP 1:

Eject devices in the OS

STEP 2:

Unlock if using a lock, then open the lever (C)

STEP 3:

Lift out your MacBook Air




UNDOCKING

STEP 1: CONNECT POWER & PERIPHERALS

- Connect the power adapter (3) and insert your MacBook Air's MagSafe plug into the Magsafe Power Port (5)
- Connect Ethernet & peripherals such as monitor, keyboard, storage devices, drawing tablet, etc. (Note: you must install the Ethernet driver first to use Ethernet)

Tip: For high-speed charging, connect your iPhone, iPad, or iPad to the USB port on the side (6)

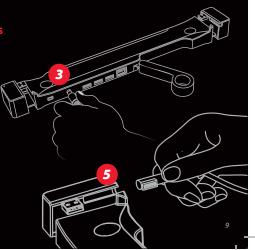

STEP 2: CONNECTING YOUR MACBOOK AIR

- Place your closed MacBook Air into LandingZone until the back of your MacBook Air touches the two quide posts (A)
- Push both ends (B) of the LandingZone gently inward to fully engage with the MacBook Air. Do not use the lever on the LandingZone when you dock the computer

Optional: If you have a Kensington[®] Lock (not included) lock the LandingZone following instructions with the lock

